


## Installing Nu-Cranks on Mustang Quarter Window Regulators

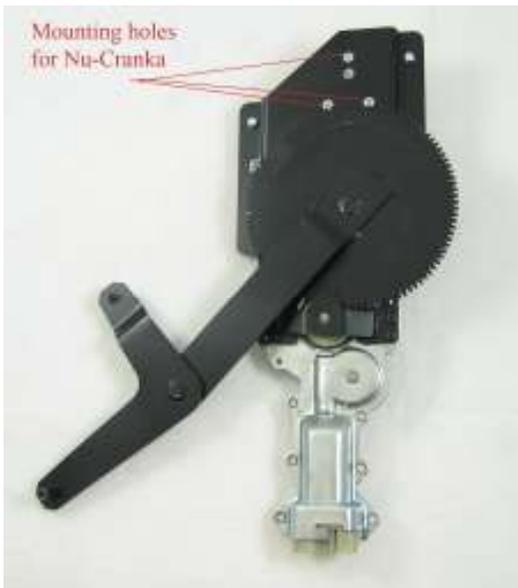

The Nu-Crank Switch will be mounted directly to the regulator.

- Remove the backing plate from the Nu-Crank Switch. You may need to rotate the backing plate to get it off the front housing. Retain the 3 screws
- Ensure that the springs remain in place and are down within the switch housing.



- Place the Nu-Crank switch on the front of the regulator aligning the three screw holes.
- Using the 3 screws that held the backing plate to the switch housing, attach the Nu-Crank to the regulator. Screws will go in from the back side on the regulator

Front view of the rear quarter with Nu-Crank installed.

